

**Paul Yaffe's  
Bagger  
Nation**

# **I·B·E·A·M**


**BRAKE LEVER**




**INSTALL  
INSTRUCTIONS**




**PAUL YAFFE ORIGINALS**  
DESIGN & DEVELOPMENT

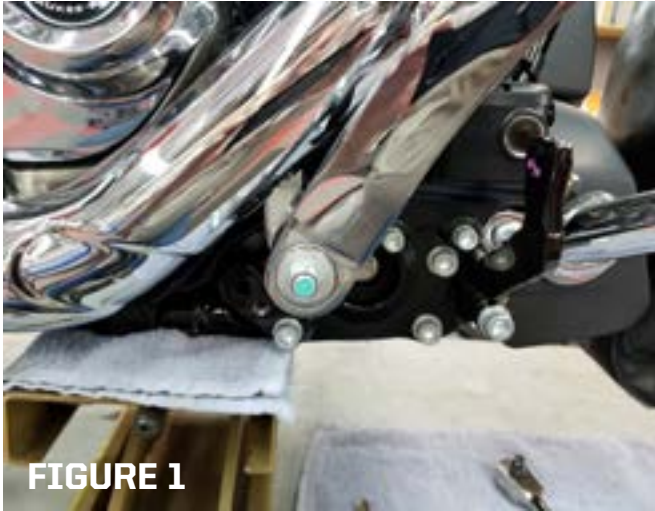

1. Remove right side rider floorboard with rear bracket. (FIGURE 1)

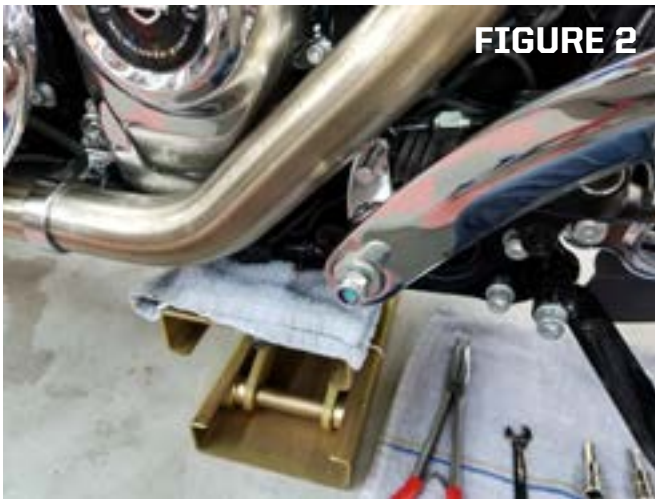

2. Remove front exhaust pipe heat shield & remove cotter pin. (FIGURE 2)

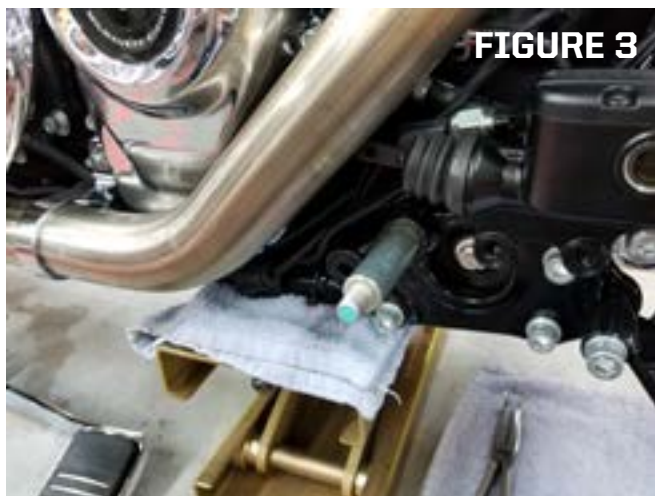

3. Loosen & Remove Master Cylinder mounting bolts. Move Master Cylinder towards front & remove Clevis Pin. (FIGURE 3)
4. Remove arm mounting nut & washer. Remove Arm. Lube Shaft w/ light grease.



**FIGURE 5a.**



**FIGURE 5b.**

**5. Slide I-Beam arm into position. Insert Clevis Pin, washer & Cotter Pin. Bend back cotter pin ends. (FIGURE 5a. | 5b.)**

**6. Resecure master cylinder**

**7. Install outside O-Ring on cap and install with blue Loctite. Snug down cap to 15 ft.lbs. Be careful with hex bit in cap. (it will be tight!)**

**8. Reinstall heat shield & tighten**

**9. Reinstall floorboard**

**10. Pump brake multiple times before riding**

**ENJOY!**





# I·BEAM

BRAKE LEVER

**Paul Yaffe's**  
**Bagger**  
**Nation™**

602.840.4205  
BAGGERNATION.COM