

# **Paul Yaffe's** **Bagger** **Nation**™

## 2017 AND LATER SWOOP CHIN SCOOP INSTALLATION TIPS



Please read through this entirely before beginning your installation procedure.



Step 1: Remove OEM radiator cover. No tools required, it just snaps off.



Step 2: Remove thread protectors from bottom mounting studs.




Step 3: Identify provided hardware.



Step 4: Remove the two cable retaining clamps. They snap off without tools.



The clamps removed.

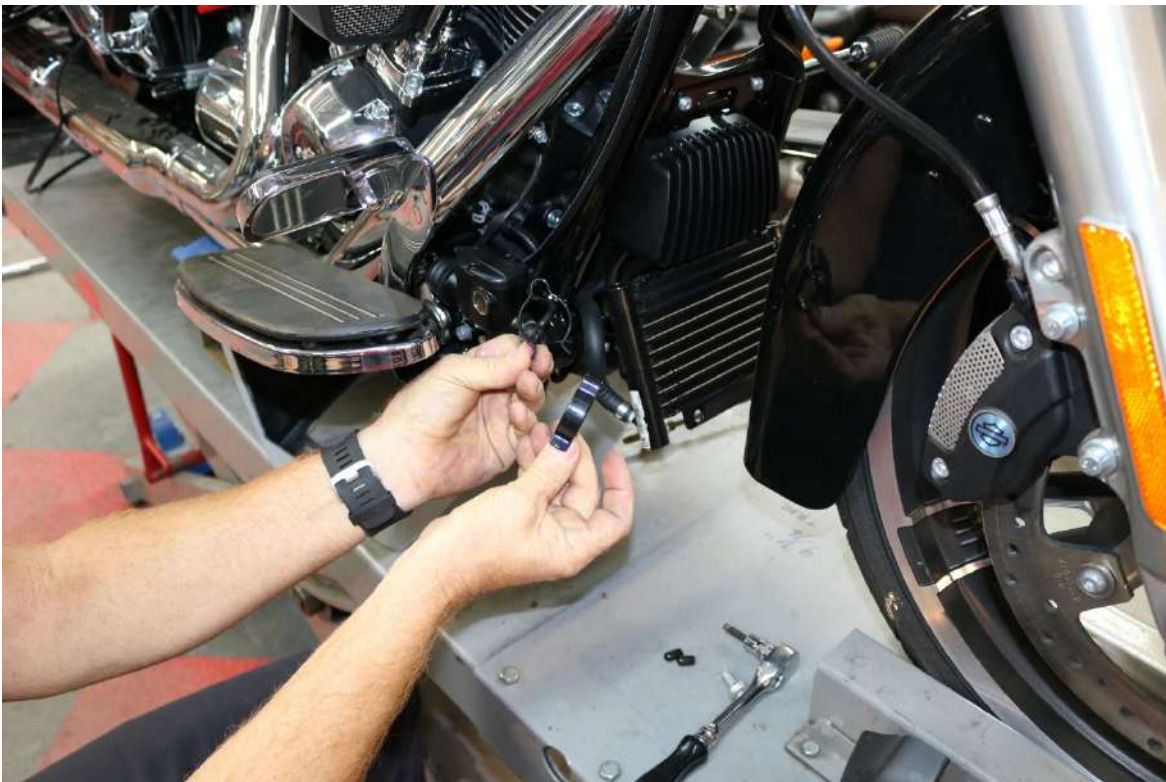

Step 5: Install provided zip tie around cable and frame. Do not fully tighten at this time.




Step 6: Carefully slide Swoop Chin Scoop in sideways as shown and rotate up into position.



Step 7: Insert the lower mount studs into the bottom radiator mount holes.



Step 8: The cable that you zip tied in step #5 will fit in relief area on the upper edge of the Swoop Chin Scoop.

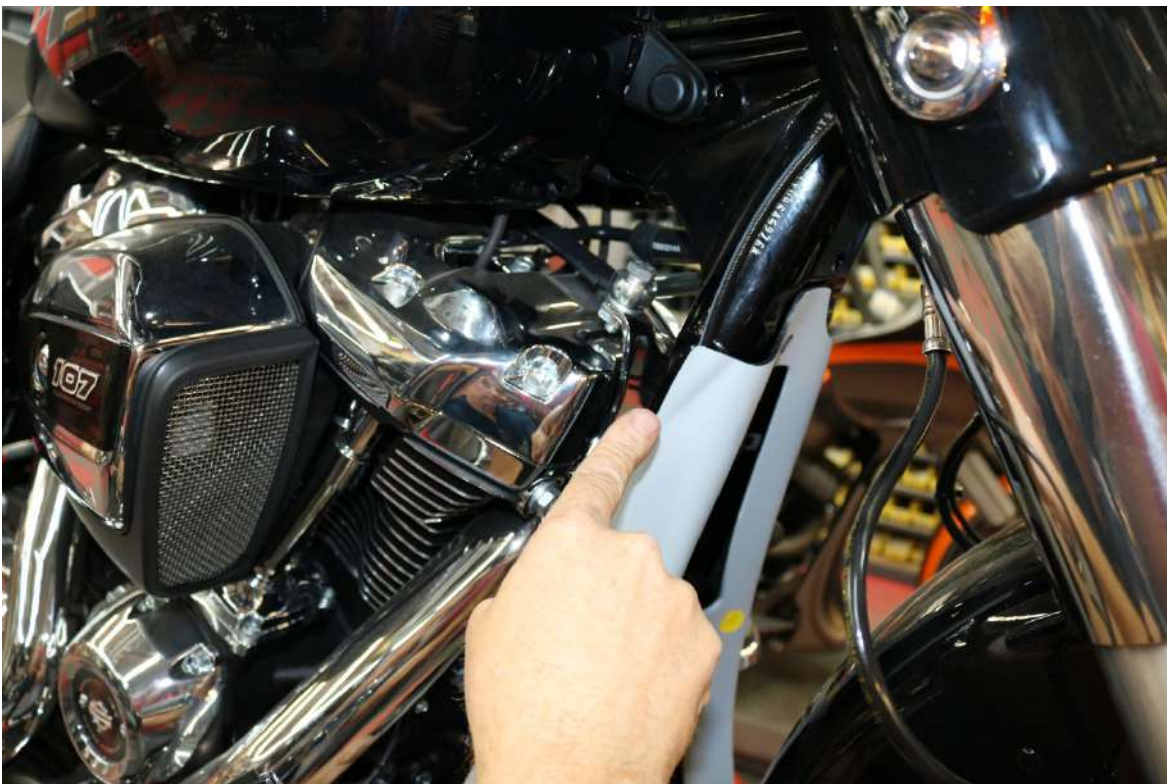

Step 9: Install provided screw, two washers and on Nylock nut through the upper mounting hole and snug.



Step 10: Install two Nylock nuts with two flatwashers on back side of radiator and snug.



Step 11: Tighten and trim zip tie.



Step 12: After painting your Swoop Chin Scoop, install your mesh grille using black silicone adhesive.





Step 13: Use a strong tape to hold the grille in place while you glue it.



Your new Swoop Chin Scoop is ready for final installation!



If you have any questions or comments, please contact us at [cs@baggernation.com](mailto:cs@baggernation.com) or call 602-840-4205.

Thank you for your purchase, we really appreciate your business!