




Installation Guide

Universal Stealth III CVO Install Tips

Thanks for choosing Paul Yaffe Designs and Bagger Nation products. The Stealth III Plate assembly is designed to be a fairly simple install part that will clean up the tail end of your bike and give it smoother flow and more custom appearance. Please read these instructions completely before beginning.



1) The two plate assembly mounting screws are located under your license plate. Remove them. See Fig #1 /#2

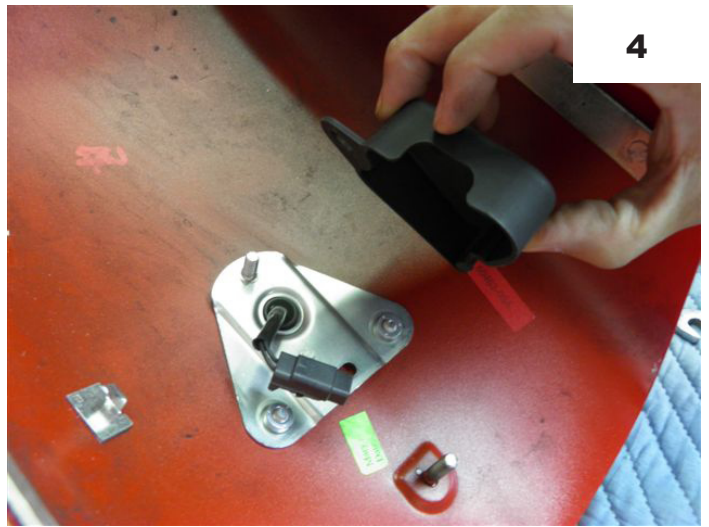

2) On the underside of your fender is a Pyramid shaped plastic box that is retained by one 7/16" nut. Remove this nut and the plastic box. See Fig #3 /#4




3) Disconnect electrical plug connector and remove stock plate and light assembly from the bike. See Fig #5 /#6

7



4) The metal license plate mount plate that was inside the fender under the black plastic box will need to have the (2) threaded bungs drilled out with a 1/4" drill bit. See Fig #7

8

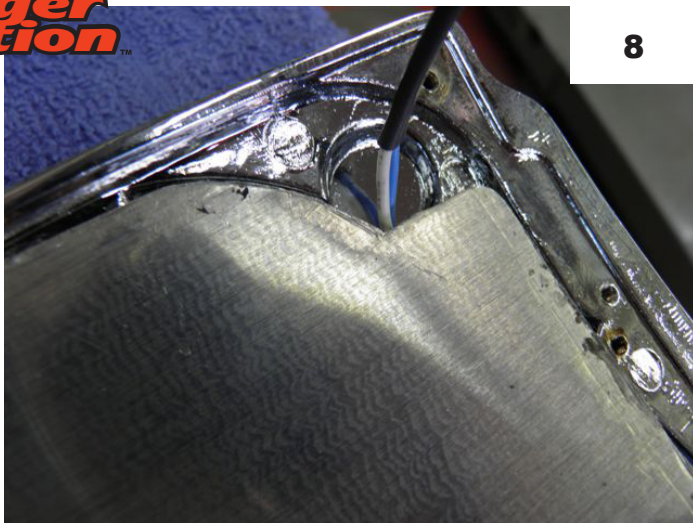

5) Install your license plate in the Stealth III plate assembly. Remove the 10 small screws that hold the plate frame and backing plate together. We recommend trimming off the upper left corner of your license plate so it doesn't interfere with the wires for the plate lights.

9




Reassemble the back plate and Stealth frame and tighten the 10 small screws firmly. Install the foam gasket by peeling the backing away and sticking it to the back plate. You are now ready to install the Stealth III. See Fig #8 / #9

10




6) Align the Stealth III over the (2) existing mounting holes feeding the wire through the larger hole, place the triangular metal plate that you drilled earlier inside the fender with the threaded stud facing away from the fender and the wires pulled through the large round center hole.

11

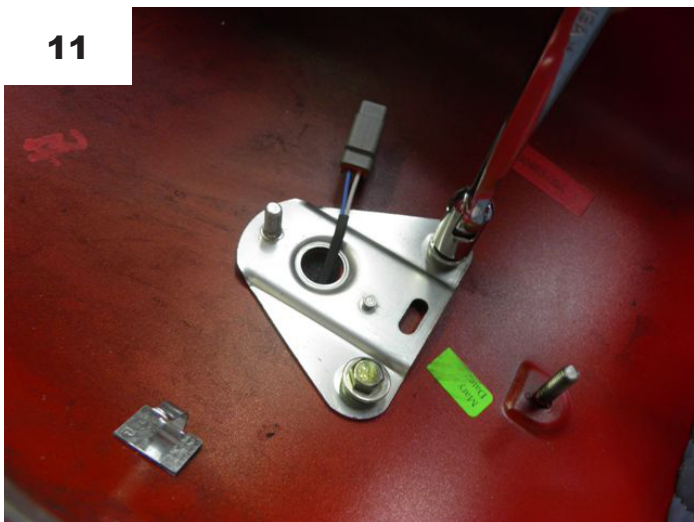

Install the (2) bolts provided with flat washers and blue lock tite and tighten firmly. See Fig #10/ #11 / #12

12

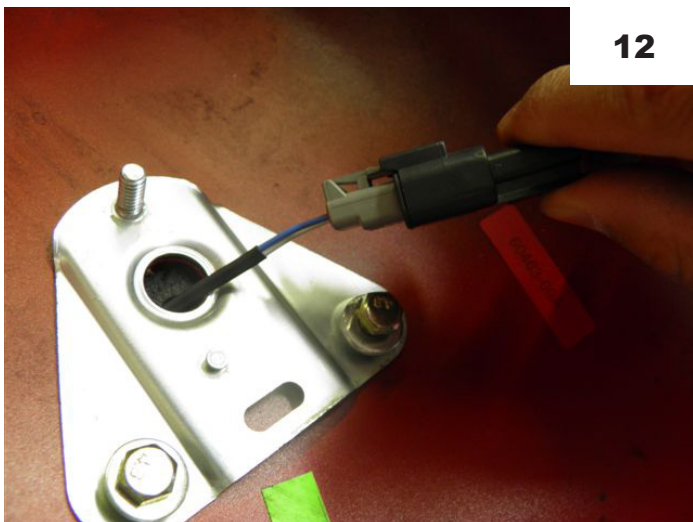

13



14



7) Connect the male and female plugs. (Stop here and turn your ignition on and verify the plate frame lights. If the lights don't light, see trouble shooting tips below) The black side wire connector has a clip, on it that attaches to the small pin on the metal mount plate. Install the black plastic cover and secure with 7/16 head nut. See Fig #13/ #14 / #15

15



Now go show off your badass Stealth III plate frame and tell your friends where you got it!!

Trouble Shooting:

If you test your lights and they don't light: reverse the wires and try again. Sometimes they get installed in the plugs backwards / Double Check your ground / Connect wires directly to the battery positive and negative terminals / reverse wires on terminals.

If you've tried all this and still no light... Call us @ (602) 840-4205