

2015 Road Glide Stealth Fairing Support Bar Install (patent pending)

1. Remove outer fairing per service manual
2. Remove fairing support brackets (See figure 1)
3. Remove the bumpers behind media storage compartments (See figure 2)
4. Slide the Stealth Fairing Support Bar up between the inner fairing and media storage compartments. Push up, seating bar in the front against the fairing bracket. Loosely start the side bracket bolts and mark front mount holes and drill. (See figures 3 and 4)
5. Clean up any burrs from drilling process and install the two 5/16-18 bolts and half nuts.
6. Tighten and then tighten side mount bolts
7. Reinstall outer fairing



Figure 1

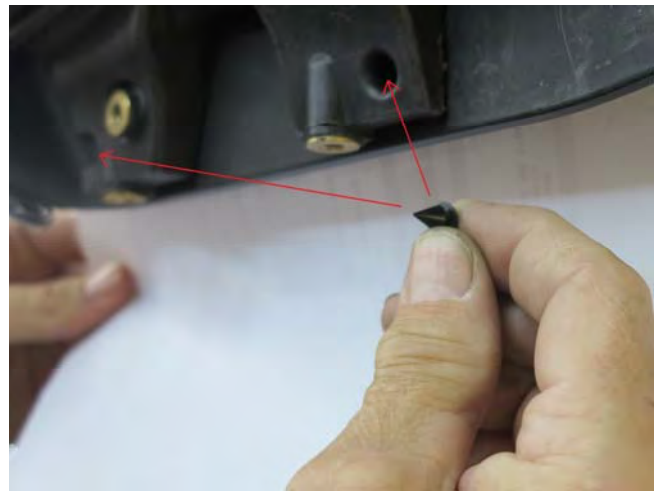


Figure 2



Figure 3



Figure 4